

JanSan Whole Room Dryer

Air Mover w/ Handle-Wheels



Doc # 98-20020

Rev. 06/2013

Delivery & Unpacking

Your air mover was protectively packed to prevent damage in shipment. We suggest that upon removing the unit from its carton, carefully inspect it for any possible damage in transit. If damage is discovered, immediately notify the transportation company who delivered your machine. We are unable to act upon any claim for concealed damage; you must originate the claim.

JanSan

— Manufacturing Co. —

Po Box 14065
Merrillville, IN 46411
866-350-7160
www.JanSanMFG.com

Distributed By:

READ AND UNDERSTAND ALL WARNINGS AND INSTRUCTIONS BEFORE USING THIS MACHINE!



WARNING! To reduce the risk of fire, electric shock, or injury:

- 1) Read the manual carefully and completely before attempting to operate the unit. This manual has important information for the use and safe operation of the machine. Following the recommendations outlined in this manual will assure years of satisfactory service from your unit.
- 2) Improper connection of the equipment grounding conductor can result in a risk of fire, electrical shock or personal injury. Always use a three-wire electrical system connected to the electrical ground. For maximum protection against electrical shock, use a circuit that is protected by a ground fault circuit interrupter. Check with a qualified electrician or service person if you are in doubt as to whether your outlet is properly grounded. Do not use a unit with a damaged cord or plug.
- 3) Machines can cause an explosion when near flammable materials and vapors. Do not use or store this machine with or near fuels, grain dust, solvents, thinners, or other flammable materials. Do not use flammables to clean this machine.
- 4) Do not immerse or use this unit in standing water. Such use may cause electrical shock. To avoid electrical shock, do not expose the unit to rain – store it indoors only. Do not expose the unit to freezing temperatures.
- 5) Do not move or carry the unit when it is turned on. Do not pull or carry by the cord, use cord as a handle, close a door on the cord or pull cord around sharp edges or corners. Keep cord away from heated surfaces. Do not unplug cord by pulling on it. To unplug, grasp plug, not the cord. Do not handle plug or air mover with wet hands.
- 6) Do not put any objects into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.
- 7) Turn off all controls before unplugging.
- 8) Operate unit on a level and stable surface to prevent it from falling and possible cause of injury or damage.
- 9) Do not drop or throw the unit. Treatment of this type can cause damage to the components and create hazardous conditions.

OPERATION:

Plug your air mover into a standard grounded outlet with the correct voltage and amperage. If you are unsure about the outlet, contact your supervisor. Turn on the switch and check that the unit operates properly before letting it run.

MAINTENANCE:

- Inspect the electrical cord and wiring for damage or discoloration
- Inspect for loose fasteners
- Clean screens on the side and front of the unit
- Listen for abnormal sounds
- Keep unit clean

PERIODIC MAINTENANCE:


Use compressed air or a vacuum to remove lint and other debris from the motor, screen and blower wheel. Do not use a pressure washer to clean the unit.

GROUNDING INSTRUCTIONS:

This machine must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This machine is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be inserted into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.



WARNING! - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the machine - if it will not fit the outlet; have a proper outlet installed by a qualified electrician.

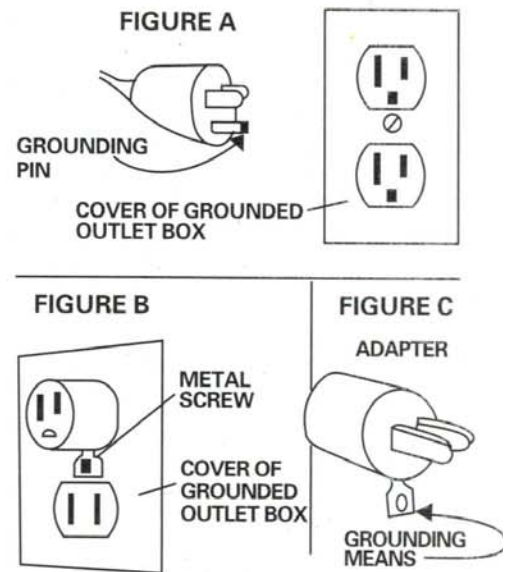

This machine is for use on a nominal 120-volt circuit, and has a grounded plug that looks like the plug illustrated in figure A. A temporary adapter that looks like the adapter illustrated in figures B and C may be used to connect this plug to a 2-pole receptacle as shown in figure B if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet (figure A) can be installed by a qualified electrician. The green colored rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw. This machine is designed to operate on a standard 15 amp, 115 Volt, 60 Hz, AC circuit. Voltages below 105 volts AC or above 125 volts AC could cause serious damage to the motor.

NOTE: In Canada, the use of a temporary adapter is not permitted by the Canadian Electrical Code

EXTENSION CORDS:

Use only three-wire 16/3 or larger gauge approved extension cords that have three-prong grounding type plugs and three-pole receptacles that accept the appliance's plug. Replace or repair any damaged cords or plugs.



WARNING! - For the safe operation of this machine follow the instructions given in this booklet and the training given by your supervisor. Failure to do so can result in personal injury and/or damage to machine and property!

DO NOT OPERATE MACHINE IN AN EXPLOSIVE ENVIRONMENT!

Assembly Instructions

Your whole room dryer comes with four caster wheels (Image 1). Screw each wheel into the screw holes located on the bottom of the unit (Image 2). Your whole room dryer will now operate in the “Whole Room Drying Position” (Image 3). Your luggage cart with wheels is already preassembled to make transporting the unit simple (Image 4).

Uses

Your whole room dryer was designed to be used two different ways. You can use your whole room dryer to dry a room without having to turn the air mover in different directions. Simply place the whole room dryer in the center of the room in the position indicated in (Image 3). The whole room dryer will circulate air flow throughout the room for quick, efficient drying. Your whole room dryer can also be used as an axial fan. Simply operate the fan on its side (Image 4).

Image 1



Image 2



Image 3



Image 4



Limited Warranty

1 Year Limited Warranty on Parts

This air mover is warranted for one (1) year to be free from manufacturing defects due to imperfections in workmanship and materials. The Manufacturer will exchange parts for your floor machine in the event of a manufacturing defect as follows:

PARTS: New or comparable rebuilt parts, for one year after original purchase .

Normal wear items have a warranty of 90 days. Normal wear items include: carbon brushes, bearings, hoses, filters, gaskets, quick connects, switches, solenoids, electrical power cords, o-rings, cross fitting rubber gaskets, wheels, casters, or any part deemed as a wear item by the original manufacturer.

Contact an authorized service center for warranty item exchanges/repairs. Customer responsible for all shipping costs.

IMPORTANT WARRANTY CONDITIONS: A purchase receipt or other proof of date of original consumer purchase also will be required before warranty service is rendered.

This warranty covers normal use and does not cover damage which occurs in shipment or failure resulting from alteration, accident, misuse, abuse, neglect, or improper maintenance.

STATEMENT: This warranty is not transferable and extends only to the original purchaser when a new floor machine is purchased from an Authorized Dealer. This warranty gives you specific legal rights, and you may have other rights that vary from state to state.